

YBL

SOUNDPOINT® SERIES

SP5II, SP6II, SP6CII, SP6CSII, SP8II, SP8CII

OWNER'S GUIDE

R)

THANK YOU FOR CHOOSING JBL

For more than 60 years, JBL has been involved in every aspect of music and film recording and reproduction, from live performances to monitoring the recordings you play in your home, car or office.

We're confident that the JBL loudspeakers you have chosen will provide every note of enjoyment that you expected – and that when you think about purchasing additional audio equipment for your home, car or office, you will once again choose JBL.

Please take a moment to register your product on our Web site at www.jbl.com. It enables us to keep you posted on our latest advancements, and helps us to better understand our customers and build products that meet their needs and expectations.

JBL, Incorporated


INCLUDED

SP5II, SP6II, SP8II





One pair of speakers with arilles.

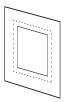

Template/paint shield. Remove paint shield (inner rectangle) at perforation.

SP6CII, SP6CSII, SP8CII






One pair of speakers with grilles (SP6CII and SP8CII). Model SP6CSII includes only one loudspeaker, since it is capable of reproducing two channels of audio.




Template/paint shield. Remove paint shield (inner circle) at perforation.


SPEAKER PLACEMENT


FRONT SPEAKERS

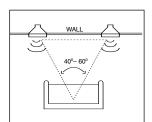

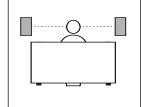


MODELS SP5II, SP6II, SP8II AS REAR SPEAKERS

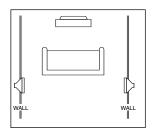

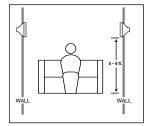

IN-CEILING MODELS SP6CII, SP6CSII, SP8CII

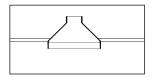

Proper placement of the speakers is an important step in obtaining the most realistic soundstage possible. These recommendations are for the optimum placement of the loudspeakers. Use these placement recommendations as a guide. Slight variations will not diminish your listening pleasure.

The front speakers should be placed the same distance from each other as they are from the listening position. They should be placed at about the same height from the floor as the listener's ears will be, with the tweeters aimed toward the listener at ear-level height.

In a home theater configuration, the two surround speakers should be placed slightly behind the listening position and ideally should face each other and be at a level higher than the listener's ears. If that is not possi-

ble, they may be placed in a wall (or in the ceiling) behind the listening position, facing forward. The surround speakers should not call attention to themselves. They should provide a diffuse, ambient sound accompanying the main program material heard in the front speakers. In Dolby® Digital and DTS® systems, aim the tweeters toward the listening position at ear-level height.

MODEL SP6CSII

Model SP6CSII has the capability of playing two channels through one loudspeaker, thanks to its dual-tweeter/dual-voice-coil construction. Since the tweeters are close together, in general they should be aimed away from each other for best coverage.

For two-channel (stereo) applications, e.g., as a single speaker in a remote room of a distributed audio system, install the SP6CSII speaker centrally in the ceiling for best stereo imaging, swiveling the tweeters so that one points toward the left and

the other toward the right of the listening position, aimed at earlevel height.


The SP6CSII may also be used to play the left and right surround channels in a 5.1-channel home theater system, in which case it should be mounted in the ceiling slightly behind the listening position, centered from left to right and with the tweeters pointing toward the left and right of the listening position, aimed at ear-level height.

For 7.1-channel systems where it is desired to use two SP6CSII speakers, one to play both the left surround and surround back channels and the other to play both the right surround and surround back channels, mount each SP6CSII speaker in the ceiling, slightly behind the listening position, one closer to the left side of the room and the other closer to the right side. Aim the tweeters away from each other, toward the front and rear of the room

SPEAKER CONNECTIONS

CONNECTION TIPS



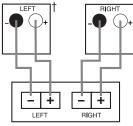

Front or Rear Speaker Outputs

† For model SP6CSII, the terminals for both the left and right channels will be on the same loudspeaker. The wires for both speakers should be the same length. If one speaker is placed closer to the amplifier than the other, hide the excess wire behind the wall. Speakers and electronics terminals have corresponding (+) and (-) terminals. Most manufacturers of speakers and electronics, including JBL, use red to denote the (+) terminal and black for the (-) terminal. It is important to connect both speakers identically: (+) on the speaker to (+) on the amplifier and (-) on the speaker to (-) on the amplifier. Wiring "out of phase" results in thin sound, weak bass and a poor stereo image. With the advent of multichannel surround sound systems, connecting all of the speakers in your system with

the correct polarity remains equally important in order to preserve the proper ambience and directionality of the program material.

To use the push-type speaker terminals, press the red (+) or black (-) cap for the desired terminal, insert the bare end of the speaker wire into the hole below the cap and release the cap. Gently tug on the wire to make sure that it is fully inserted.

WIRE LENGTH

Up to 20 ft. Up to 30 ft. Greater than 30 ft.


RECOMMENDED SIZE

16-gauge 12-gauge 10-gauge

INSTALLATION

The SoundPoint® Series in-wall speakers were designed to be easily installed. However, if you are unsure of your ability to properly install these loudspeakers, please contact your dealer or a qualified installer.

TOOLS NEEDED

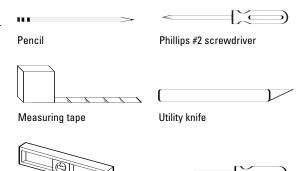


Carpenter's level


Awl

EXISTING CONSTRUCTION

SP5II, SP6II, SP8II

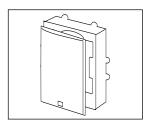


Remove the grille from the speaker frame by pulling on the paper tab. If the tab is missing, to avoid scratching the grille or baffle you may unfold a paper clip, insert the straight end through one of the holes in the grille, and gently pull up.

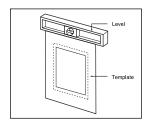


Determine the correct speaker location.


Note: Remove the inner template, which is the paint shield, at the perforation. Use the outer template when cutting the drywall.

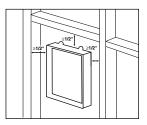


Note: Always allow at least one-half inch between a wall stud and the speaker cutout or the locking tabs will not be able to swivel into place.

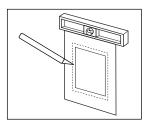


Cut the drywall.

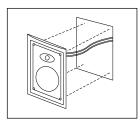

Connect the speaker wires to the speaker.

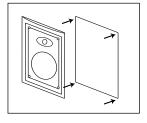


Place the frame assembly in the wall.

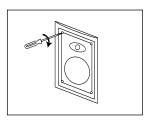

Screw down each of the four Phillips head screws. The locking tabs will swivel into place and secure the unit to the rear surface of the drywall.


The SoundPoint speakers feature unique swivel mounts for the tweeters that enable you to aim the very directional high frequencies toward the listening position, at ear-level height. Before installing the speaker grille, gently press on the outer edge of the tweeter mount to adjust the position of the tweeter. The tweeter will not swivel more than 15 degrees in any direction; do not attempt to force it to move further. You may also rotate the tweeter to orient the JBL logo as desired.

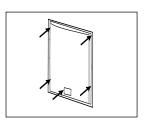


Replace the metal grille.

EXISTING CONSTRUCTION

SP6CII, SP6CSII, SP8CII

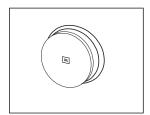


Remove the grille from the speaker frame by pulling on the paper tab. If the tab is missing, to avoid scratching the grille or baffle you may unfold a paper clip, insert the straight end through one of the holes in the grille, and gently pull up.

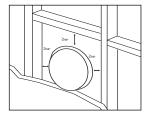


Determine the correct speaker location.

Note: Remove the inner template, which is the paint shield, at the perforation. Use the outer template when cutting the drywall.

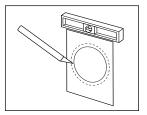


Cut the drywall.


Note: Always allow at least one-half inch between a wall stud and the speaker cutout or the locking tabs will not be able to swivel into place.

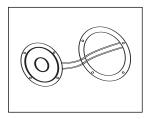

Connect the speaker wires to the speaker. Model SP6CSII requires two sets of speaker wires, one for each channel.

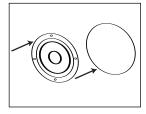

Place the frame assembly in the wall.

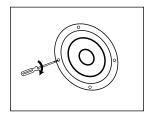


Screw down each of the four Phillips head screws. The locking tabs will swivel into place and secure the unit to the rear surface of the drywall.

The SoundPoint speakers feature unique swivel mounts for the tweeters that enable you to aim the very directional high frequencies toward the listening position, at ear-level height. Before installing the speaker grille, gently press on the outer edge of the tweeter mount to adjust the position of the tweeter. The tweeter will not swivel more than 15 degrees in any direction; do not attempt to force it to move further. You may also rotate

the tweeter to orient the JBL logo as desired.

The dual tweeters of the SP6CSII speaker may be swiveled independently. Optimum imaging will be obtained by aiming the tweeters to the left and right of the listening position, at ear-level height, if your application permits.

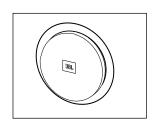

Replace the metal grille.

NEW CONSTRUCTION

You will need to purchase the correct rough-in frame kit for your model:

SPEAKER MODEL ROUGH-IN FRAME KIT

 SP5II
 RIF5

 SP6II
 RIF6

 SP6CII
 RIF6C

 SP6CSII
 RIF6CS

 SP8II
 RIF8

 SP8CII
 RIF8C

Detailed installation instructions are supplied with the rough-in kit.

PAINTING THE SPEAKER FRAME AND GRILLE

SoundPoint Series loudspeakers can be painted to match any décor. If you wish to change their color, the satin finish on the grille and frame will function as a primer coat. Before painting, install the paint shield (inner section of template in the assembly kit) securely into the recess in the

baffle. This will protect the speaker components and baffle from paint residue. Use a high-quality spray paint, and apply a thin coat of color.

Be certain the grille perforations remain free of paint.

Filling them with paint will diminish the sound quality.

Note: Gently remove the acoustical foam blanket from the grille before painting. Reattach the blanket after the paint has dried.

TROUBLESHOOTING

IF THERE IS NO SOUND FROM ANY OF THE SPEAKERS:

- Check that receiver/amplifier is on and a source is playing.
- Check all wires and connections between receiver/amplifier and speakers. Make sure all wires are connected. Make sure none of the speaker wires are frayed, cut, punctured or touching each other.
- Review proper operation of your receiver/amplifier.

IF THERE IS NO SOUND COMING FROM ONE SPEAKER:

- Check the "Balance" control on your receiver/amplifier.
- Check all wires and connections between receiver/amplifier and speakers. Make sure all wires are connected. Make

sure none of the speaker wires are frayed, cut, punctured or touching each other.

IF THERE IS LOW (OR NO) BASS OUTPUT:

- Make sure the connections to the left and right "Speaker Inputs" have the correct polarity (+ and -).
- Consider adding a powered subwoofer to your system.
- In Dolby Digital or DTS modes, make sure your receiver/ processor is correctly configured. When using a subwoofer, make sure the subwoofer output of the receiver/ processor has been enabled. If no subwoofer is being used, make sure the left and right front and rear speakers have been configured as "LARGE." See your receiver/processor's

owner's manual for futher information on correct speaker configuration in Dolby Digital, DTS and other surround sound modes.

IF THE SYSTEM PLAYS AT LOW VOLUMES BUT SHUTS OFF AS VOLUME IS INCREASED:

- Check all wires and connections between receiver/amplifier and speakers. Make sure all wires are connected. Make sure none of the speaker wires are frayed, cut, punctured or touching each other.
- If more than one pair of main speakers is being used, check the minimum-impedance requirements of your receiver/amplifier.

SPECIFICATIONS

SP6CSII SP8CII SP6II SP6CII SP8II SP5II Frequency Response Frequency Response Frequency Response Frequency Response Frequency Response Frequency Response 45Hz- 20kHz (-10dB) 38Hz - 20kHz (-10dB) 40Hz-20kHz (-10dB) 40Hz - 20kHz (-10dB) 30Hz - 20kHz (-10dB) 32Hz - 20kHz (-10dB) Recommended Maximum Recommended Maximum Recommended Maximum Recommended Maximum Recommended Maximum Recommended Maximum Amplifier Power † 60 watts 80 watts 80 watts 100 watts total (50WPC) 100 watts 100 watts Impedance Impedance Impedance Impedance Impedance Impedance 8 ohms nominal 8 ohms nominal 8 ohms nominal 8 ohms nominal per input 8 ohms nominal 8 ohms nominal Sensitivity Sensitivity Sensitivity Sensitivity Sensitivity Sensitivity 88dB (2.83V/1m) 88dB (2.83V/1m), both channels driven 89dB (2.83V/1m) 89dB (2.83V/1m) 87dB (2.83V/1m) 88dB (2.83V/1m) Crossover Frequency Crossover Frequency Crossover Frequency Crossover Frequency Crossover Frequency **Crossover Frequency** 3.000Hz 2.800Hz 2.600Hz 2.600Hz 2.400Hz 2.400Hz Woofer Woofer Woofer Woofer Woofer Woofer 6-1/2" titanium-laminate 6-1/2" titanium-laminate 8" titanium-laminate 5-1/4" titanium-laminate 6-1/2" titanium-laminate 8" titanium-laminate cone w/rubber surround Tweeter Tweeter Tweeter Tweeters Tweeter Tweeter 1"titanium-laminate 1"titanium-laminate Dual 3/4" 1" titanium-laminate 1"titaniumtitanium-laminate dome, w/Elliptical Oblate dome, w/Elliptical Oblate titanium-laminate dome, w/Elliptical Oblate laminate Spheroidal™ waveguide Spheroidal™ waveguide Spheroidal™ waveguide dome domes dome w/swivel mounts and swivel mount and swivel mount w/swivel mount and swivel mount w/swivel mount Plate Size (Diameter) Plate Size (Diameter) Plate Size (Diameter) Plate Size (W x H) Plate Size (W x H) Plate Size (W x H) 7-1/2" x 10" (191mm x 254mm) 8-1/2" x 11" (216mm x 279mm) 9-3/16" (233mm) 9-3/16" (233mm) 10-1/8" x 13-1/8" (257mm x 333mm) 10-7/8" (275mm) Mounting Cutout Size (W x H) Mounting Cutout Size (W x H) Mounting Cutout Size (Dia.) Mounting Cutout Size (Dia.) Mounting Cutout Size (W x H) Mounting Cutout Size (Dia.) 6-1/8" x 8-11/16" (156mm x 221mm) 7-1/8" x 9-11/16" (181mm x 246mm) 7-7/8" (200mm) 7-7/8" (200mm) 8-7/8" x 11-13/16" (225mm x 300mm) 9-1/2" (240mm) Mounting Depth Mounting Depth **Mounting Depth** Mounting Depth Mounting Depth Mounting Depth 3-3/4" (95mm) 3-7/8" (98mm) 4-1/4" (108mm) 4-1/4" (108mm) 4" (102mm) 4-1/4" (108mm)

Weight per Speaker

4.5 lb (2.0kg)

All features and specifications are subject to change without notice.

Weight per Speaker

5 lb (2.3ka)

Weight per Speaker

4 lb (1.8ka)

† The maximum recommended amplifier power rating will ensure proper system headroom to allow for occasional peaks. We do not recommend sustained operation at these maximum power levels.

Dolby is a registered trademark of Dolby Laboratories.

DTS is a registered trademark of DTS, Inc.

7.8 lb (3.5kg) Declaration of Conformity

Weight per Speaker

Weight per Speaker

5.6 lb (2.5ka)

We, Harman Consumer Group International

2, route de Tours 72500 Château du Loir France

declare in own responsibility that the products described in this owner's manual are in compliance with technical standards:

EN 61000-6-3:2001 EN 61000-6-1:2001

Weight per Speaker

4 lb (1.8ka)

Laurent Rault Harman Consumer Group International Château du Loir, France 7/06

OWNER'S GUIDE PRO SOUND IRI, **COMES HOME™** PRODUCT LINE: SOUNDPOINT® SERIES JRL Incorporated 250 Crossways Park Drive, Woodbury, NY 11797 8500 Balboa Boulevard, Northridge, CA 91329 SP5II, SP6II, SP6CII, SP6CSII, SP8II, SP8CII 516.255.4JBL (4525) www.ibl.com **NOTE:** For new-construction applications, be sure to purchase the correct rough-in frame kit. **DESIGN GOAL:** Combine the superior performance of traditional JBL loudspeakers with the convenience of in-wall installation. ©2006 Harman International Industries, Incorporated, All rights reserved. TWEETER TYPE: Titanium-laminate-dome with swivel mount JBL, Harman International and SoundPoint are registered trademarks of Harman International Industries, Incorporated, WOOFER TYPE: Titanium-laminate cone with rubber surround Part Nos 406-000-05268-F 170-0091 CROSSOVER NETWORK: Straight-Line Signal Path™ (SSP) PROFESSIONAL REFERENCE: Studio Monitor A Harman International® Company